


2D scanner

Fast User Guide

Version: V9.9.2 No.24

Brief Introduction to Appearance

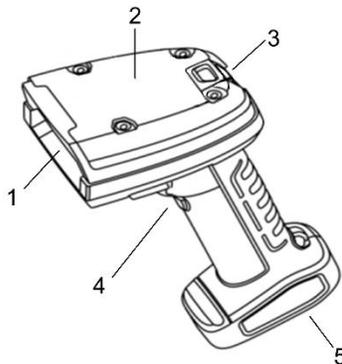

1. Scanning Window: Do not look directly at the scanning window during scanning. To avoid affecting the scanning performance, please keep the scanning window clean.
2. Status Indicator Light: The indicator light will flash once when decoding is successful
3. Prompt Tone Output Hole.
4. Manual Scan Button
5. Computer Terminal Connection Cable

Setting Code Activation/Deactivation Settings

Before scanning all setting codes, first scan the "Activate Setting Code Configuration"; after scanning all function setting codes, scan the "Deactivate Setting Code Configuration" to exit the setting code mode.



Activate Configuration Barcode



Deactivate Configuration Barcode

Version Information

Translation: Scanning the barcode below will output the relevant version information once.



Get Device Version Number



Get Algorithm Version Number



Get Hardware Version Number



Get Device Serial Number

Interface Type Settings

Scan the barcode below to configure the barcode scanner to USB HID Keyboard mode.



** USB HID Keyboard mode

Scan the barcode below to configure the barcode scanner to USB CDC communication mode, which simulates a regular RS232-based COM port and requires no additional configuration (e.g., baud rate, etc.).



USB CDC Communication Mode

Terminator Settings



Carriage Return On



Carriage Return Off



Line Feed On



Line Feed Off

1D/2D Code Full Recognition Settings



Enable All 1D Codes



Disable All 1D Codes



Enable All 2D Codes



Disable All 2D Codes

1D Code Recognition Settings



Enable Code39



Disable Code39



Enable Code ITF25



Disable Code ITF25



Enable Code128



Disable Code128



Enable Code EAN8



Disable Code EAN8



Enable Code ITF14



Disable Code ITF14



Enable Code Codabar



Disable Code Codabar



Enable Code93



Disable Code 93

1D Code Recognition Settings



*Enable Code EAN13



Disable Code EAN13



Enable Code UPCA



Disable Code UPCA



Enable Code UPCE



Disable Code UPCE

2D Code Recognition Settings



Enable Code QR



Disable Code QR

2D Code Recognition Settings



Enable Code DM



Disable Code DM



Enable Code MicroQR



Disable Code MicroQR



Enable Code AZTEC



Disable Code AZTEC



Enable Code Han Xin



Disable Code Han Xin



Enable Code PDF417



Disable Code PDF417